



This lamp contains a light source with an energy efficiency class <D>

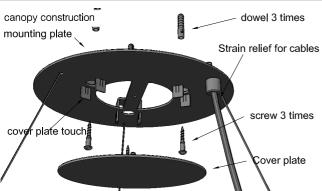

canopy from above

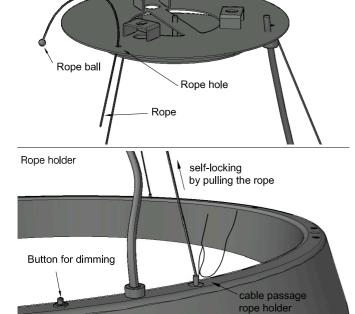

Self-locking is canceled by pushing back the cable bushing

Notice:

The distance to the ceiling, as well as to objects and people under the lamp, must be at least 0.5m.

ATTENTION!

Before installation, the connecting cable must be de-energized.

Assembly:

We recommend having the installation carried out by a specialist company. We ask for your understanding that we can only provide a guarantee if the installation is carried out correctly.

- Determine the position of the chandelier in the room and first place it on a clean, soft surface on the floor.
- Plumb the center point of the chandelier to the ceiling (to the power cord in the ceiling) and attach the canopy mounting plate to the ceiling.
- Pull the ropes through the rope holes in the mounting plate from above. The rope ball should lie in the rope hole
- Insert the ends of the rope into the rope holder of the chandelier and pull the rope through the rope holder until the chandelier hangs at the desired height.
- Insert the lamp cable from below through the strain relief of the canopy and guide it through the cable opening.
- 6. Then shorten the cable to the desired length and connect it to the supply line.
- Screw the cover plate onto the mounting plate. When doing this, make sure that you do not turn any further when the plate touches the contact points of the plate.
- Adjust the chandelier using a spirit level. Danger! The ropes must not be pushed more than 3 cm into the chandelier. Note the representation of the handling of the rope holder.
- 9. Adjust the cable length and slightly tighten the strain relief locking screw.

Dimming:

The chandelier is equipped with a button. Short press: switch on / off. Press and hold: dim.

Synchronizing the light circuits (lamp switched on):

Step 1: Press and hold the button for more than one second (long PUSH) to dim. All LEDs start to dim up or down.

Step 2: Press the button again, but only briefly (<1s). This means that all LEDs go out.

Step 3: Another long press (more than a second) will sync the drivers and the LEDs will work together again.

Cleaning:

It is recommended to clean the light with a soft, dry cloth. You can clean the glass elements with any commercially available glass cleaner.



